

# Change Low Temperature Sensor (60-744-95R) Battery

## Read before changing batteries!

Before changing batteries, please call the monitoring station and ask them to put your system on test. For this, you will need your account information. Please note that putting your batteries in backwards may damage the device. Remember to note the battery terminals.



You will need 2 x AAA Batteries

1. Press in the tab and remove the cover from the base.
2. Locate the batteries.
3. Gently remove the batteries.
4. Note the battery terminals (+, -). Putting Batteries in Backwards can damage the Device.
5. Place new batteries in the device (2 x AAA).
6. Note the hook on the back end of the device.
7. Starting from the side with the hook, place the cover back on the device.
8. Press in until you hear a click.