

Change Micro Keyfob (600-1064-95R) Battery



Read before changing batteries!

Before changing batteries, please call the monitoring station and ask them to put your system on test. For this, you will need your account information. Please note that putting your batteries in backwards may damage the device. Remember to note the battery terminals.

You will need a small flat head screwdriver and a CR2032 Battery

1. Find the notch at the bottom corners of the device.
2. Using the screwdriver, pry off the cover of the device.
3. Remove the plastic cover and gently remove the circuit board from the rubber cover.
4. Gently remove the battery.
5. Note the battery terminals (+, -). Putting in a battery reversed can damage the device.
6. Place a new battery in the device (CR2032).
7. Place the rubber cover back on the circuit board, ensuring the corners match up, and place it back in the plastic cover.
8. Press in the two sides of the plastic cover until you hear a click.
9. Test the buttons. If the device is functional, the light will blink when you press a button, and arm or disarm your alarm system.