

Change Alula Backup Battery



Read before changing batteries!

Before changing batteries, please call the monitoring station and ask them to put your system on test. For this, you will need your account information. Please note that putting your batteries in backwards may damage the device. Remember to note the battery terminals.

You will need a 6VDC 2.5Ah NiMH Battery

1. Before changing the battery, unplug your device.
2. Find the tab at the top of the device.
3. Press in the tab and pull off the cover.
4. Locate the battery connector wires.
5. Remove the little white battery connector.
6. Remove and replace battery.
7. Place the battery connector into the terminal.
8. Starting at the bottom, replace the cover on the base. Press in until you hear a click.
9. Plug your device back in.